


WORTH KNOWING WHILE YOU'RE GOING...

- RIDGE VENTS ARE COMMON ON MANY MODERN, LIGHT-WEIGHT, RESIDENTIAL ROOFS.
- THE GAP AT THE PEAK WILL USUALLY PROVIDE AN EXCELLENT PURCHASE POINT FOR A HOOK.
- ROOF DECKING IS TYPICALLY (18"-2 ft) x 8 ft NEAR THE PEAK AND CAN BE REMOVED QUICKLY.

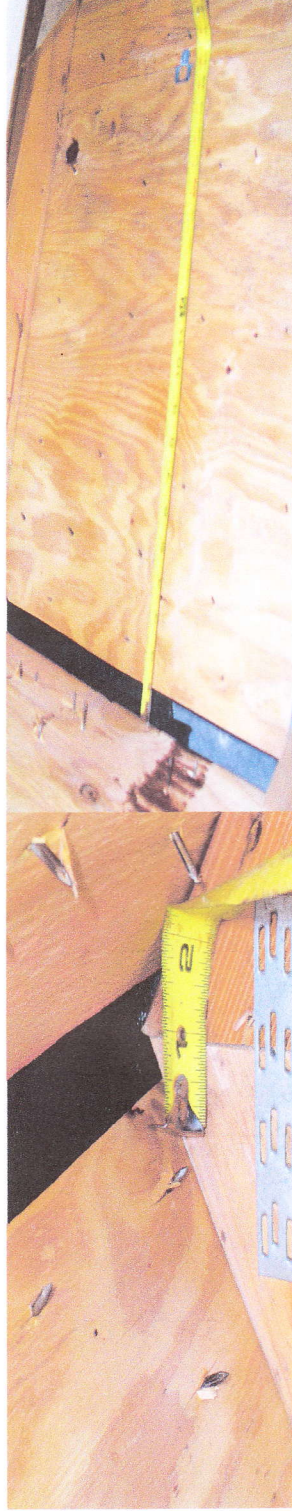

- RIDGE VENTS ARE EASILY RECOGNIZED AND CAN BE USED TO THE TRUCKIE'S ADVANTAGE
- KNOCK OFF THE RIDGE VENT, INSERT THE HOOK, AND PULL UNTIL ADEQUATE DECKING IS REMOVED.
- THE VENT HOLE ON THE BOTTOM RIGHT WAS MADE BY THIS METHOD AND TOOK LESS THAN A MINUTE AND DID NOT REQUIRE THE USE OF A SAW OR COMMITTING PERSONNEL ON A LIGHT-WEIGHT TRUSS ROOF.

